

WARRANTY CARD

Thank you for your purchase of our products. The interests of customers who purchase our products will be protected. For any malfunction due to product quality problems, please contact authorized local dealers or service centers with this receipt and the warranty card.

Warranty terms:

1. For product failures occur under normal operating circumstances, free of charge repair and spare parts replacement service shall be provided by our company within one year commencing from date of purchase.
2. Customers are required to present this warranty card and the original purchase invoice to our company upon request for warranty service. This warranty card shall be valid only after the following form is filled out in details and affixed with official seal of the dealer.
3. No free of charge repair service shall be provided in the event of any of the following circumstances:
 - (1) Expiration of the warranty period;
 - (2) Damages caused by improper use, maintenance or storage not in accordance with the requirements of the user manual;
 - (3) Failure or damage resulting from unauthorized disassembly, repair or modification;
 - (4) Failure or damage caused by force majeure;
 - (5) Wear parts or accessories.

This warranty card is being delivered with the product, one card for one product. Please keep this warranty card in proper condition for free warranty service. There is no replacement if lost.

Date of Purchase : _____ Y _____ M _____ D

Product Information	Product Name			Serial Number	
	Product Model Number			Manufacturing Date	
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

This copy shall be cut along the dotted line and kept by the dealer.

Product Information	Product Name			Serial Number	
	Product Model Number			Manufacturing Date	
Customer Information	Company Name			Contact	
	Address			Phone	
Sales Information	Dealer Name			Contact	
	Address			Phone	
	Date of Purchase			Invoice No.	
Maintenance Record	Description of Malfunction	Maintenance Results	Customer Signature	Maintenance Technician Signature	Maintenance Date

Special Disclaimer:

While information of this manual has been rigorously checked and reviewed, we still cannot rule out the possibility of spelling mistakes and technical negligence and/or errors. Such negligence and/or errors will be corrected in the updated version(s) without further notice. The intellectual property of this manual belongs to our company, and no organization or individual is allowed to change the content.

CERTIFICATE

Inspector: _____

Date of Manufacture: _____

DELI GROUP CO., LTD.

301 Xuxiake Ave. Ninghai County
Ningbo 315600 China Made in China
info@nbdeli.com www.deliworld.com

 


**KEEP FOR
FUTURE USE**

Version: 1.0
Date: 10-2020

U THERMAL RECEIPT PRINTER SER'S MANUAL

MODEL: 581P

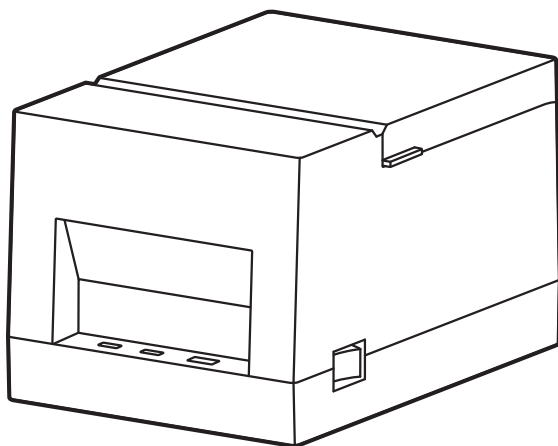


deli

DELI GROUP CO.,LTD.
www.deliworld.com

1.packing checklist

 Please check if the product is intact after unpacking and verify that all the accessories have been received. Please contact the dealer for any defect and/or missing of accessory.



Printer



USB cable



Power cord



User manual

 
 
 
 


Paper roll




Installation CD

2.Physical appearance and components

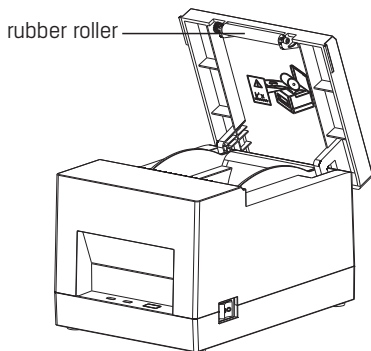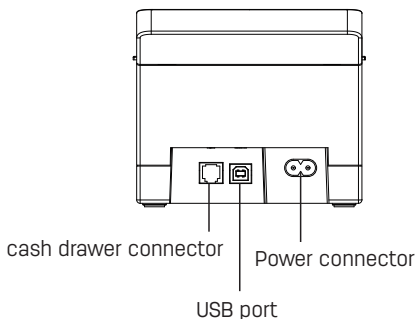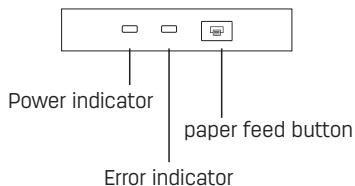
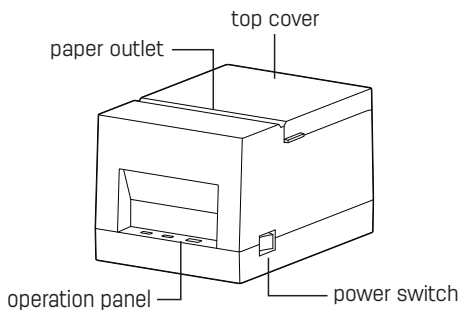


3.Loading the paper roll

 
1. Follow the arrow to open the printer top cover by pushing it up.
2. Please remove the paper roll inside the paper compartment, if there are any.

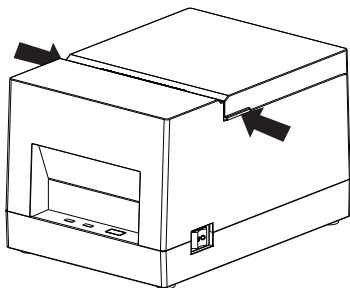

  3. Place the paper roll into the paper compartment in the right direction.

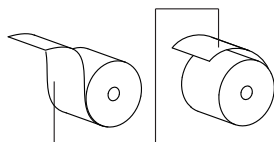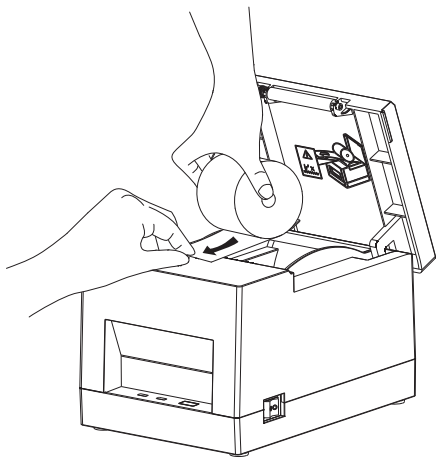


The heat-sensitive side faces outward

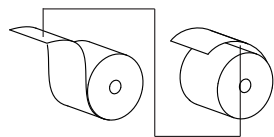 


The heat-sensitive side faces inward



 4. Please pull out a small amount of paper in the front , and then close the printer top cover.

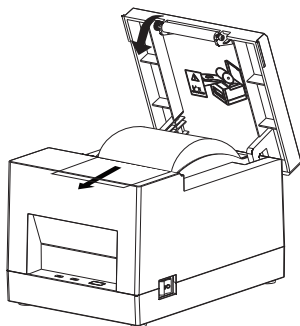


 5. Tear off excess paper

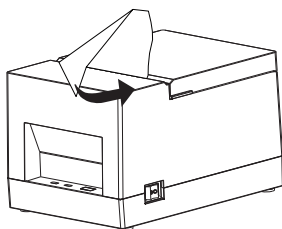


4.Connecting the power cord

 1. Make sure the printer's power switch is off (O).
2. Connect the power adapter to the printer.
3. Plug the power cord into the other end of the power supply.



1

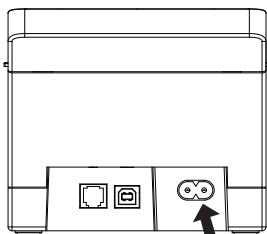 

2



3

Power cord

5. Use of Bluetooth

Bluetooth pair :

It needs to be paired with the main device before using Bluetooth to print. The pairing process is initiated by the main device.

1. Turn on the printer;
2. Search for external Bluetooth devices through the main device ;
3. If there are multiple external Bluetooth devices, select the printer;
4. Complete matching ;

Tips :

1. When pairing, the printer must be on.
2. When pairing, please pair one-to-one, otherwise it may not be able to determine which printer is paired successfully.
3. DL-581P(NEW) does not support Bluetooth function.
4. This is a Class A product. In a domestic environment this product may cause radio interference in which case the user may be required to take adequate measures.
5. Up to 3 IOS apps (3 apps need to be on the same iPhone) and 6 Android apps can be connected at the same time.

Print Using Bluetooth Interface:

For PCs with virtual Bluetooth serial ports (such as mobile phones using SMARTPHONE, POCKET PC, PALM, notebook computers, etc.), after pairing successful, you can send print data to the printer through the virtual Bluetooth serial port for printing.

Tips:

To download the driver and editing software, please go to Deli's official website <http://www.nbdeli.com/> or use installation CD. This device contains a radio transmitter module with a model approval code: CMIIT ID: 2019DP4046.